



Codice articolo Product code:	2001013 - PROCEDURA DI ASSEMBLAGGIO DELLA PRESA / SOCKET ASSEMBLY INSTRUCTION
Descrizione Description:	PRESA CCS CAT. 5E RJ45 NON SCHERMATA UTP COLORE BIANCO - T568A/B CAT. 5E CCS UNSHIELDED UTP RJ45 JACK COLOUR WHITE - T568A/B

PROCEDURA DI ASSEMBLAGGIO


- 1) Tagliare la guaina esterna del cavo per circa 50 mm (riferimento misura su CRIMP TOOL Cod. Art. 2004095)

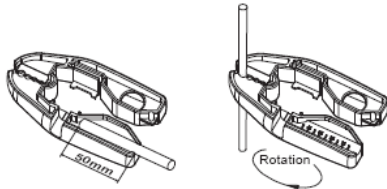


- 2) Seguendo la colorazione di terminazione T568A/B posizionare la prima coppia ed usare l'attrezzo Impact Tool per eseguire la terminazione. Il canale centrale permette di mantenere la twistatura dei fili entro i 13 mm dal punto di terminazione

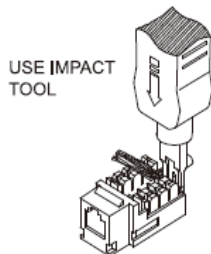

- 3) Come per la prima coppia, posizionare e terminare anche le altre coppie una alla volta

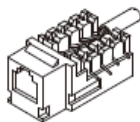


- 4) Tagliare i conduttori in eccedenza ed inserire i coperchi copri connessioni. La presa ora è pronta per essere installata su pannelli, placche o scatole da esterno

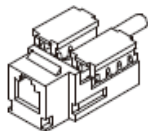

ASSEMBLY INSTRUCTION


- 1) Cut cable outer jacket about 50 mm off (measure indicated on CRIMP TOOL Cod. Art. 2004095)

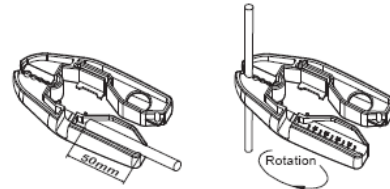

- 2) Position first pair according to T568A/B termination colours and use Impact Tool for fastening connection. The center channel lets you preserve wire twisting to well within 13 mm of the termination point



- 3) As with the first pair, position and terminate each subsequent pair one at a time until termination is completed

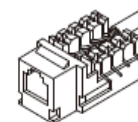

- 4) Cut conductor surplus jutting and place strain relief caps. The jack is now ready to be snapped into faceplate or mounting box

