



Codice articolo Product code:	2002015 - PROCEDURA DI ASSEMBLAGGIO DELLA PRESA / SOCKET ASSEMBLY INSTRUCTION
Descrizione Description:	PRESA CCS CAT. 6 RJ45 NON SCHERMATA UTP COLORE BIANCO- T568A/B CAT. 6 CCS UNSHIELDED UTP RJ45 JACK COLOUR WHITE - T568A/B

PROCEDURA DI ASSEMBLAGGIO

ASSEMBLY INSTRUCTION



- 1) Tagliare la guaina esterna del cavo per circa 50 mm (riferimento misura su CRIMP TOOL Cod. Art. 2004095)

- 1) Cut cable outer jacket about 50 mm off (measure indicated on CRIMP TOOL Cod. Art. 2004095)

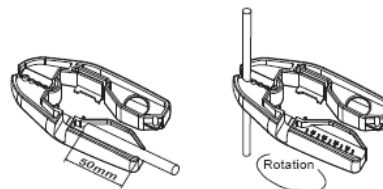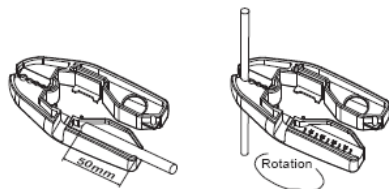


- 2) Seguendo la colorazione di terminazione T568A/B posizionare le coppie ed usare l'attrezzo Impact Tool per eseguire la terminazione come mostrato in figura. Il canale centrale permette di mantenere la twistatura dei fili entro i 13 mm dal punto di terminazione

- 2) Position pairs according to T568A/B termination colours and use Impact Tool for fastening connections as shown in figure. The center channel lets you preserve wire twisting to well within 13 mm of the termination point



- 3) Tagliare i conduttori in eccedenza ed inserire il coperchio copri connessioni

- 3) Cut conductor surplus jutting and place strain relief cap



- 4) Applicare la fascetta tra cavo e presa

- 4) Use the cable tie to fix the jack to the cable

